

General Module: Service and Repair


Front Electronic Module (FEM)

FRONT ELECTRONIC MODULE (FEM)


REMOVAL

1. **CAUTION:** Prior to removal of the FEM, it is necessary to upload module configuration information to a diagnostic tool. This information needs to be downloaded into the new module once installed.


Disconnect the battery ground cable.

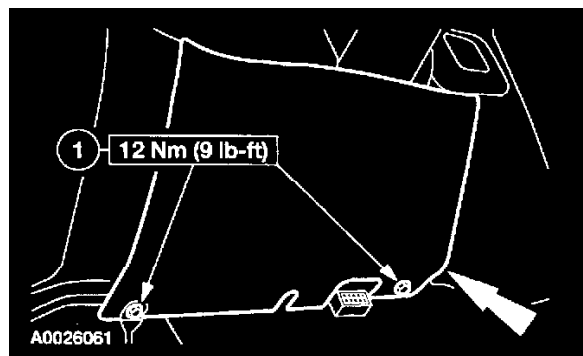

2. Remove the instrument panel lower steering column opening cover.
 - 1 Remove the bolts.

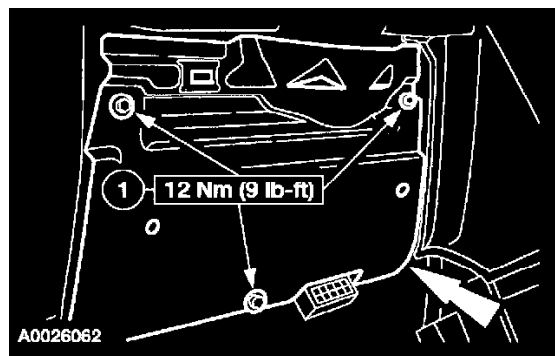

3. Remove the instrument panel opening cover reinforcement.
 - 1 Remove the bolts.

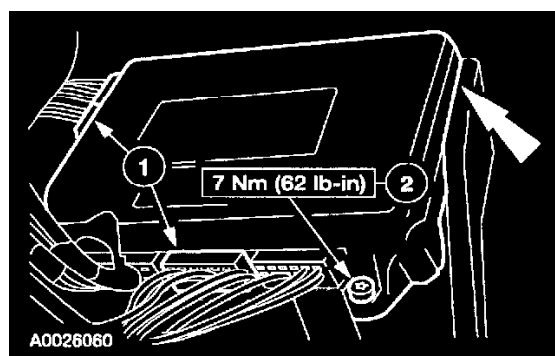

4. Remove the front electronic module (FEM).
 - 1 Disconnect the five electrical connectors.
 - 2 Remove the three bolts.

INSTALLATION

1. **CAUTION:** Once the new module is installed, it is necessary to download the module configuration information from the diagnostic tool into the new module.

To install, reverse the removal procedure.