

SELF-DIAGNOSIS INDICATOR BLINKS	SYSTEM INDICATED
0	ECU
1	Heated Oxygen Sensor (HO2S)
3	MANIFOLD ABSOLUTE PRESSURE (MAP)
4	CRANK ANGLE (CKP)
6	Engine Coolant Temperature Sensor (ECT)
7	Throttle Position Sensor (TP)
8	TDC Position Sensor (TDC)
9	No. 1 CYLINDER POSITION (CYL)
10	INTAKE AIR TEMPERATURE (IAT)
13	Barometric Pressure Sensor (BARO)
14	Idle Air Control Valve (IAC)
15	IGNITION OUTPUT SIGNAL
16	FUEL INJECTOR
17	VEHICLE SPEED SENSOR (VSS)
19	A/T LOCK-UP CONTROL SOLENOID VALVE A/B
20	ELECTRIC LOAD DETECTOR (ELD)
41	OXYGEN SENSOR HEATER
43	FUEL SUPPLY SYSTEM