

STALLING DURING WARM UP

ACCORD

Check Electric Air Control Valve (EACV), fast idle valve, air boost valve and fuel system. Check coolant temperature sensor operation.

CIVIC 1.5L & CRX (STD.)

Check MAP sensor, ignition output signal and EACV.

CIVIC 1.6L & CRX (HF & SI)

Check EACV, fast idle valve, air boost valve and fuel system.

PRELUDE

Verify proper MAP sensor operation, coolant temperature sensor and carburetor.