

SELF-DIAGNOSIS INDICATOR BLINKS	SYSTEM INDICATED
0	ECU
1	OXYGEN SENSOR (D15B8, D15B7, D16Z1 engine)
3	MANIFOLD ABSOLUTE PRESSURE (MAP SENSOR)
5	
4	CRANK ANGLE (CRANK SENSOR)
6	COOLANT TEMPERATURE (TW SENSOR)
7	THROTTLE ANGLE
8	TDC POSITION (TDC SENSOR)
9	No. 1 CYLINDER POSITION (CYL SENSOR)
10	INTAKE AIR TEMPERATURE (TA SENSOR)
12	EXHAUST GAS RECIRCULATION SYSTEM (EGRI)
13	ATMOSPHERIC PRESSURE (PA SENSOR)
14	ELECTRONIC AIR CONTROL (EACV)
15	IGNITION OUTPUT SIGNAL
16	FUEL INJECTOR
17	VEHICLE SPEED SENSOR
19	A/T LOCK-UP CONTROL SOLENOID VALVE A/B
20	ELECTRIC LOAD DETECTOR (ELD)
21	SPOOL SOLENOID VALVE
22	VALVE TIMING OIL PRESSURE SWITCH
41	OXYGEN SENSOR HEATER
43	FUEL SUPPLY SYSTEM (except D15Z1 engine)
48	LAF SENSOR (D15Z1 engine)

Trouble Code Diagnostic Chart