


TACHOMETER

Connect external inductive-type engine tachometer to engine speed detection connector. See **Fig. 25**. Start engine and compare tachometers at specified engine speed. See **TACHOMETER SPECIFICATIONS** table. Replace tachometer if difference is excessive. See **INSTRUMENT PANEL CLUSTER GAUGES** under REMOVAL & INSTALLATION.

TACHOMETER SPECIFICATIONS

Engine RPM	Allowable Range
700	600-800
3000	2850-3150
5000	4750-5250
6000	5700-6300

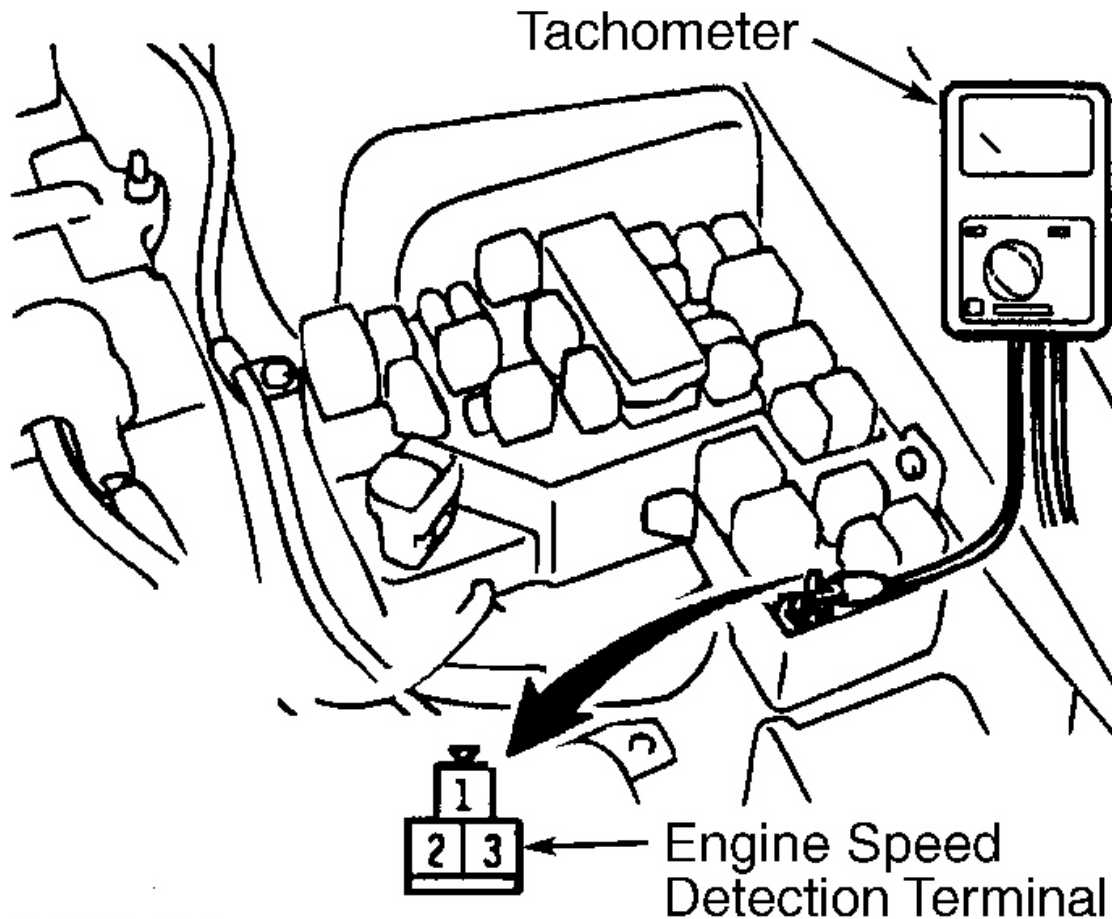

G00027714

Fig. 25: Connecting External Inductive Tachometer
Courtesy of DAIMLERCHRYSLER CORPORATION