

SENDING UNITS & SENSORS**SENDING UNITS & SENSORS**

Component	Component Location
Absolute Pressure Sensor	On right side of engine compartment. See Fig. 1 .
Camshaft Position Sensor	Inside distributor. See Fig. 1 .
Crankshaft Position Sensor (OBD)	On right rear of engine. See Fig. 1 .
Crash Zone Sensor (4WD)	On center front of engine compartment.
EGR Temperature Sensor	On right rear of engine, next to EGR valve. See Fig. 1 .
Engine Coolant Temperature Sensor	On top left front of engine. See Fig. 1 .
EVAP Canister Purge Volume Control Valve	On right side of engine compartment. See Fig. 1 .
EVAP Control System Pressure Sensor	Above right side of rear axle.
Fuel Tank Gauge Unit	On top of fuel tank.
Heated Oxygen Sensor (HO2S) (Front)	On exhaust manifold.
Heated Oxygen Sensor (HO2S) (Rear)	On exhaust system, rear of catalytic converter.
Intake Air Temperature Sensor	On air cleaner housing.
Mass Air Flow Sensor	On right side of engine, part of air intake assembly. See Fig. 1 .
Rear Sensor	On differential.
Thermal Transmitter	On top left front of engine.
Throttle Position Sensor	On throttle body assembly. See Fig. 1 .
EVAP Control System Pressure Sensor	Above right side of rear axle.
Vehicle Speed Sensor	On right side of transmission.