

Maintenance Schedule

[Owner Checks and Services](#)

At Each Fuel Stop

- Check the engine oil level. See [Engine Oil](#).

Once a Month

- Check the tire inflation pressures. See [Tire Pressure](#).
- Inspect the tires for wear. See [Tire Inspection](#).
- Check the windshield washer fluid level. See [Washer Fluid](#).

[Engine Oil Change](#)

When the CHANGE ENGINE OIL SOON message displays, have the engine oil and filter changed within the next 1 000 km/600 mi. When the CHANGE ENGINE OIL NOW message displays, have the engine oil and filter changed as soon as possible. If driven under the best conditions, the engine oil life system might not indicate the need for vehicle service for more than a year. The engine oil and filter must be changed at least once a year and the oil life system must be reset. Your trained dealer technician can perform this work. If the engine oil life system is reset accidentally, service the vehicle within 5 000 km/3,000 mi since the last service. Reset the oil life system when the oil is changed. See [Engine Oil Life System](#).

[Tire Rotation and Required Services Every 12 000 km/7,500 mi](#)

Rotate the tires, if recommended for the vehicle, and perform the following services. See [Tire Rotation](#).

- Check engine oil level. © 2013 General Motors. All rights reserved. Change engine oil and filter, and reset oil life system. See [Engine Oil](#) and [Engine Oil Life System](#).
- Check engine coolant level. See [Engine Coolant](#).
- Check windshield washer fluid level. See [Washer Fluid](#).
- Visually inspect windshield wiper blades for wear, cracking, or contamination. See [Exterior Care](#). Replace worn or damaged wiper blades. See [Wiper Blade Replacement](#).
- Check tire inflation pressures. See [Tire Pressure](#).
- Inspect tire wear. See [Tire Inspection](#).
- Visually check for fluid leaks.
- Inspect engine air cleaner filter. See [Engine Air Cleaner/Filter](#).
- Inspect brake system.
- Visually inspect steering, suspension, and chassis components for damaged, loose, or missing parts or signs of wear. See [Exterior Care](#).
- Check restraint system components. See [Safety System Check](#).
- Visually inspect fuel system for damage or leaks.
- Visually inspect exhaust system and nearby heat shields for loose or damaged parts.
- Lubricate body components. See [Exterior Care](#).
- Check starter switch. See [Starter Switch Check](#).

- Check automatic transmission shift lock control function. See [Automatic Transmission Shift Lock Control Function Check](#).
- Check ignition transmission lock. See [Ignition Transmission Lock Check](#).
- Check parking brake and automatic transmission park mechanism. See [Park Brake and P \(Park\) Mechanism Check](#).
- Check accelerator pedal for damage, high effort, or binding. Replace if needed.
- Visually inspect gas strut for signs of wear, cracks, or other damage. Check the hold open ability of the strut. See your dealer if service is required.
- Inspect sunroof track and seal, if equipped. See [Sunroof](#).

| Maintenance Schedule Additional Required Services – Normal | 12 000 km/7,500 mi | 24 000 km/15,000 mi | 36 000 km/22,500 mi | 48 000 km/30,000 mi | 60 000 km/37,500 mi | 72 000 km/45,000 mi | 84 000 km/52,500 mi | 96 000 km/60,000 mi | 108 000 km/67,500 mi | 120 000 km/75,000 mi | 132 000 km/82,500 mi | 144 000 km/90,000 mi | 156 000 km/97,500 mi | 168 000 km/105,000 mi | 180 000 km/112,500 mi | 192 000 km/120,000 mi | 204 000 km/127,500 mi | 216 000 km/135,000 mi | 228 000 km/142,500 mi | 240 000 km/150,000 mi |
|--|--------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|----------------------|----------------------|----------------------|----------------------|----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| Rotate tires and perform Required Services. Check engine oil level and oil life percentage. Change engine oil and filter, if needed. | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Replace passenger compartment air filter. (1) | | | ✓ | | | ✓ | | | ✓ | | | ✓ | | | ✓ | | | ✓ | | |
| Inspect evaporative control system. (2) | | | | | | ✓ | | | | | ✓ | | | | | | | ✓ | | |
| Replace engine air cleaner filter. (3) | | | | | | ✓ | | | | | ✓ | | | | | | | ✓ | | |
| Replace spark plugs. Inspect spark plug wires. | | | | | | | | | | | | | ✓ | | | | | | | |
| Change automatic transmission fluid, if equipped. If filter is serviceable, change filter. | | | | | | | | | | | | | ✓ | | | | | | | |
| Change transfer case fluid, if equipped with AWD. (4) | | | | | | | | | | | | | ✓ | | | | | | | |
| Drain, flush, and fill engine cooling system. (5) | | | | | | | | | | | | | | | | | | | | ✓ |
| Visually inspect accessory drive belts. (6) (7) | | | | | | | | | | | | | | | | | | | | ✓ |
| Replace brake fluid. (8) | | | | | | | | | | | | | | | | | | | | ✓ |



Footnotes — Maintenance Schedule Additional Required Services — Normal

(1) Or every two years, whichever comes first. More frequent replacement may be needed if the vehicle is driven in areas with heavy traffic, areas with poor air quality, or areas with high dust levels. Replacement may also be needed if there is a reduction in air flow, excessive window fogging, or odors.

(2) Check all fuel and vapor lines and hoses for proper hook-up, routing, and condition. Check that the purge valve, if the vehicle has one, works properly. Replace as needed.

(3) Or every four years, whichever comes first.

(4) Do not directly power wash the transfer case output seals. High pressure water can overcome the seals and contaminate the transfer case fluid. Contaminated fluid will decrease the life of the transfer case and should be replaced.

(5) Or every five years, whichever comes first. See [Cooling System](#).

(6) Or every 10 years, whichever comes first.

(7) Inspect for fraying, excessive cracking, or damage; replace, if needed.

| Maintenance Schedule Additional Required Services – Severe | 12 000 km/7 500 mi | 24 000 km/15 000 mi | 36 000 km/22 500 mi | 48 000 km/30 000 mi | 60 000 km/37 500 mi | 72 000 km/45 000 mi | 84 000 km/52 500 mi | 96 000 km/60 000 mi | 108 000 km/67 500 mi | 120 000 km/75 000 mi | 132 000 km/82 500 mi | 144 000 km/90 000 mi | 156 000 km/97 500 mi | 168 000 km/105 000 mi | 180 000 km/112 500 mi | 192 000 km/120 000 mi | 204 000 km/127 500 mi | 216 000 km/135 000 mi | 228 000 km/142 500 mi | 240 000 km/150 000 mi |
|--|--------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|---------------------|----------------------|----------------------|----------------------|----------------------|----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| Rotate tires and perform Required Services. Check engine oil level and oil life percentage. Change engine oil and filter, if needed. | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Replace passenger compartment air filter. (1) | | | ✓ | | | ✓ | | | ✓ | | | ✓ | | | ✓ | | | ✓ | | |
| Inspect evaporative control system. (2) | | | | | | ✓ | | | | | | ✓ | | | | | | ✓ | | |
| Replace engine air cleaner filter. (3) | | | | | | ✓ | | | | | | ✓ | | | | | | ✓ | | |
| Change automatic transmission fluid, if equipped. If filter is serviceable, change filter. | | | | | | ✓ | | | | | | ✓ | | | | | | ✓ | | |
| Change transfer case fluid, if equipped with AWD. (4) | | | | | | ✓ | | | | | | ✓ | | | | | | ✓ | | |
| Replace spark plugs. Inspect spark plug wires. | | | | | | | | | | | | | ✓ | | | | | | | |
| Drain, flush, and fill engine cooling system. (5) | | | | | | | | | | | | | | | | | | | | ✓ |
| Visually inspect accessory drive belts. (6) (7) | | | | | | | | | | | | | | | | | | | | ✓ |
| Replace brake fluid. (6) | | | | | | | | | | | | | | | | | | | | ✓ |



Footnotes — Maintenance Schedule Additional Required Services — Severe

(1) Or every two years, whichever comes first. More frequent replacement may be needed if the vehicle is driven in areas with heavy traffic, areas with poor air quality, or areas with high dust levels. Replacement may also be needed if there is a reduction in air flow, excessive window fogging, or odors.

(2) Check all fuel and vapor lines and hoses for proper hook-up, routing, and condition. Check that the purge valve, if the vehicle has one, works properly. Replace as needed.

(3) Or every four years, whichever comes first.

(4) Do not directly power wash the transfer case output seals. High pressure water can overcome the seals and contaminate the transfer case fluid. Contaminated fluid will decrease the life of the transfer case and should be replaced.

(5) Or every five years, whichever comes first. See [Cooling System](#).

(6) Or every 10 years, whichever comes first.

(7) Inspect for fraying, excessive cracking, or damage; replace, if needed.