


Maintenance Required Lamp/Indicator: Service and Repair Resetting Without Scan Tool

Resetting Service Interval Display With Adjustment Buttons For Trip Recorder And Clock

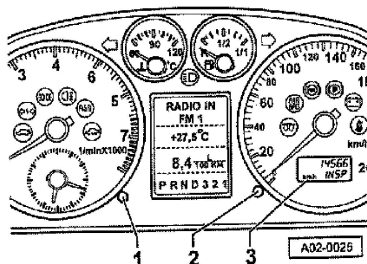

Switch ignition OFF.

Press trip recorder reset button -2- on instrument cluster and at same time switch ignition ON.

The trip recorder display -3- will read: "service OIL".

Release button.

Pull clock adjuster button -1 - on instrument cluster and hold for approx. **2 seconds**. This resets "service OIL" display.

Editor note: Audi service procedure says 'pull', it may actually be 'press'.

Note: Depending on the make of the instrument cluster, the display on the trip recorder will either continue to read: "service OIL" (Nippon Seiki) or change to "----" (VDO).

Press trip recorder reset button -2- again to advance to next type of service.

Release button.

The trip recorder display -3- will read: "service INSP".

Pull clock adjuster button -1 - on instrument cluster and hold for approx. **2 seconds**. This resets "service INSP" display.

Editor note: Audi service procedure says 'pull', it may actually be 'press'.

Note: Depending on the make of the instrument cluster the display on the trip recorder will either continue to read: "service INSP" (Nippon Seiki) or change to "----" (VDO).

Switch ignition OFF.